


1032 ATMOSCOPE SMD HOT AIR WORK STATION

• COMPLIES WITH MIL-S-45743E, MIL-STD-2000, DOD-STD-2000-1B, WS6536E AND ESD SPEC, DOD-STD-1686, DOD-HDBK-263



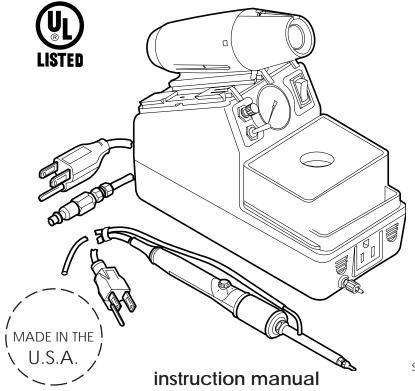



1032 ATMOSCOPE_® SMD HOT AIR WORK STATION

The versatility of the $1032 \; \text{Loner}_{\scriptscriptstyle{\oplus}}$ Hot Air Station is the key to its popularity and

effectiveness. The 1032 Loner Hot Air Station will easily remove and replace:

- 1) Leadless or leaded resistors, capacitors and transistors
- 2) Small and large outline I.C.s.
- 3) Various types of Quad-paks such as Leadless Chip Carriers, J-Leads, Gull Wings etc.


Since the 1032 Loner $_{\odot}$ Hot Air Station has a wide range of temperature, this tool can be use for:

- a) Heating of shrink tubes.
- b) Fast shaping of plastics.
- c) Fast melting of glue.

SPECIFICATIONS

- 120 V, 60 Hz, 70 W
- Weight; **FA069:** 6.5 oz. (184 g) **PS537**: 2.7 lbs. (1.23 kgs)
- Temperature range: 400°F 800°F (205°C 425°C)
- Temperature regulation: ±6°F (±3°C)
- Voltage leakage from tip to ground less than 2 MV
- Tip to ground resistance less than 2 ohm
- UL listed



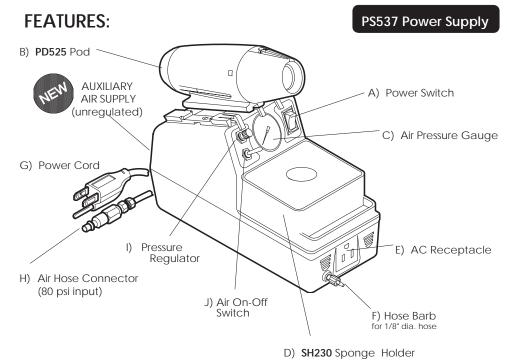

- A) Activates System Power.
- B) Tool Holder (PLACE TOOL WHEN NOT IN USE)
- C) Measures air pressure output. (30 psi maximum reading)
- D) Includes (1) LN230 Liner, (1) RS199 Cleaning Sponge and RS243 Leveling Pad.
- E) Capable of handling (2) 70 W Tools.
- F) Controlled air output.
- G) Heavy duty Power Cord.
- H) Connects to shop air by using a 1/8-27 NPT tting.
- I) Regulates air output.
- J) Turns on and shuts off air output.

OPERATION


- 1. Connect 1032 to power source and to shop air.
- 2. Plug-in hot air tool. connect hose to controlled air output (F)
- 3. Turn on power switch and air switch
- 4. Adjust temperature and air pressure.

OPTIONS:

1032-3 ATMOSCOPE®

SMD Hot Air Station

A 1032 with an added Soldering Tool and a Tool Pod.

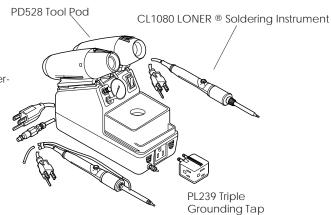




LP250

Lifting Pencil

Powered by low vacuum, this tool is very handy for picking and placing components. Tool Length is 5 25/32" (146.8 mm). Weight is 0.81oz. (22.7 q)





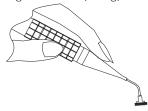







PM171

Pod with Vacuum Generator

Vacuum Generator, Filter and Pod in a Module. Complete set-up to power the LP220. Attach to the Auxilliary Air Supply at the back of the PS537 Power Supply.

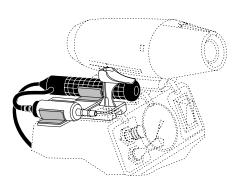

PS537 POWER SUPPLY SPARE PARTS LIST

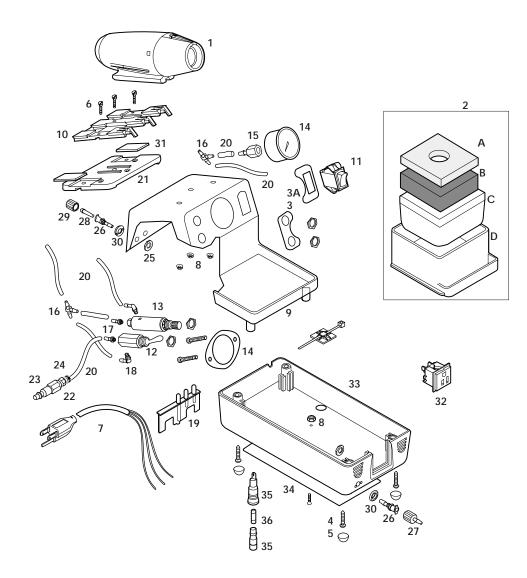

ITEM NO.	PART NO.	DESCRIPTION	QTY REQ'D
_1	PD525	Tool Pod for SMD Hot Air Tools	11
2	SH230	Sponge Holder with LN230, RS199, RS243	11
2A	RS199	Cleaning Sponge for SH230	11
2B	RS243	Leveling Pad for SH230	1
2C	LN230	Liner for SH230	11
2D	SH230-1	Sponge Holder Tray	1
3	SR272	Label, Control Panel, Left Side (For Air Control)	1
3A	SR273	Label, Control Panel, Right Side (For Power Switch)	11
4	SR011	Screw, #6-18 x 5/8" Pan Head Phillips	4
_5	SR012	Rubber Foot	4
_6	SR488	Screw, #6-32 x 7/8 Flat Head Slotted	4
7	SR026	Power Cord, 120 VAC	11
-8	SR467	Nut, Hex., #6-32	4
9	SR003	Top Cover	11
10	SR019	Dovetail Mount	11
11	SR065	Power Switch	1
12	SR705	Air Switch	1
13	SR270	Air Pressure Regulator	1
_14	SR257	Pressure Gauge (Bracket included)	1
15	SR738	Threaded Fitting, for 1/8 i.d. Hose	1
_16	SR271	Tee-Fitting, for 1/8 i.d. Hose	2
17	SR261	Fitting, Mini Barbed, Male	2
18	SR382	Fitting, 90° Elbow	2
19	SR241	Strain Relief for Power Cord	1
20	SR283	Hose, 1/8" i.d. x 1/4 o.d. Polyurethane (Sold Per Foot)	
		6 ft. 8", 3", 3", 3", 7/8"	
_21	SR035	Dovetail Riser Adapter Plate	1
22	HB357	Fitting, Barbed, for 1/8" i.d. Hose	1
_23	HB359	Fitting, Male, Quick Disconnect, Air Input	1 1
_24	LC363	Locking Sleeve for 1/4 o.d. Hose	1 1
_25	SR274	Nut, Hex, 14-28, brass	2
_26	SR275	Fitting, Female Bulkhead Mounting, 1/8 i.d.	2
_27	SR486	Fitting, Male, Luer, for 1/8" i.d. Hose	1
28	SR277	Plug, Male, for 1/8 id. Female Bulkhead Fitting	1
29	SR278	Lock Ring for female Bulkhead Fitting	2
_30	SR279	Color Code Ring	2
_31	SR036	Shelf Plate	2
_32	SR037	3-Prong 120 VAC Receptacle	1
_33	SR767	Bottom Base for PS542	1
_34	SR054	Bottom Weight	1 1
_35	SR569	Fuse Holder	1
_36	SR724	Fuse, 6.3A, 250V	1
_37	SR050	Cable Tie	1
38	SR051	Mount for Cable Tie	1 1

1032 instruction manual



ALL RIGHTS RESERVED.

NO PART OF THIS PUBLICATION INCLUDING THE INDIVIDUAL ICONS

MAY BE REPRODUCED OR UTILIZED IN ANY FORM OR BY ANY MEANS

WITHOUT THE PERMISSION OF EDSYN, INC.

THE NAMES LONER, SOLDAPULLT, SOLDAVAC, ATMOSCOPE, AUTO-VAC, IDLE-REST,
OCTAVAC AND KLATCH
ARE REGISTERED TRADEMARKS OF EDSYN, INC.



MOST PRODUCTS ARE COVERED BY U.S. AND FOREIGN PATENTS AND PENDING APPLICATIONS.

DESIGN, COLOR AND MATERIALS SUBJECT TO CHANGE WITHOUT NOTICE.

TIP STYLE ON SOLDERING, DESOLDERING AND HOT AIR TOOLS MAY VARY.

PRINTED IN U.S.A.

©Copyright EDSYN, Inc. 1998



15958 ARMINTA ST. VAN NUYS, CA 91406-1896 PHONE: 818.989.2324 FAX (sales): 818.997.0895 Email: info@edsyn.com Internet: www.edsyn.com



FORM.488 Rev E