

FXI252

Installation Kit for FX250 or FX300 Volume Extraction Units with 3 x 50mm Arms

CONTENTS

Item	Quantity	Description
1	2	2.5m Long 75mm Tube
2	1	1 m Long 75mm Flexi Tube
3	3	1 m Long 50mm Flexi Tube
4	3	Adaptor
5	6	50mm jubilee Clips
6	2	75mm jubilee Clips
7	1	75mm/50mm Reducer with Balancing Valve
8	1	75mm Y with Reducer and Balancing Valve
9	1	75mm Elbow with Reducer and Balancing Valve
10	1	Silicone Grease
11	6	75mm Cobra Clips
12	6	Screws

INSTRUCTIONS

Smear a small amount of silicone grease (item 10) onto the 'O' ring in the sleeve of the 75/50 reducer (item 7) and then push fit it onto one of the 75mm connections on the FX250 Unit. The other items shown in the diagram overleaf should then be fitted to connect between the reducer and the extraction arm.

The other two arms should be attached using the items as shown in the diagram on page 2. The 75mm pipework (item 1) should be fixed to a convenient place on the benches using the cobra clips and screws (items 11 and 12). A smear of silicone grease (item 10) is required on the 'O' ring of 'all sleeve connections. Make sure all raw tube edges are tapered with a knife to ensure an easy fit into each sleeve.

Once the installation is completed the balancing valves should be adjusted to give an equal flow at each arm.


Should you experience any difficulties with the installation please call our Customer Service Department

Note item 4 is not required for the articulated arms.

EDSYN, Inc.

15958 Arminta Street Van Nuys CA 91406 Phone: 818.989.2324 Fax: 818.989.2324 www.edsyn.com

Typical Set up for 3 50mm arm attachments

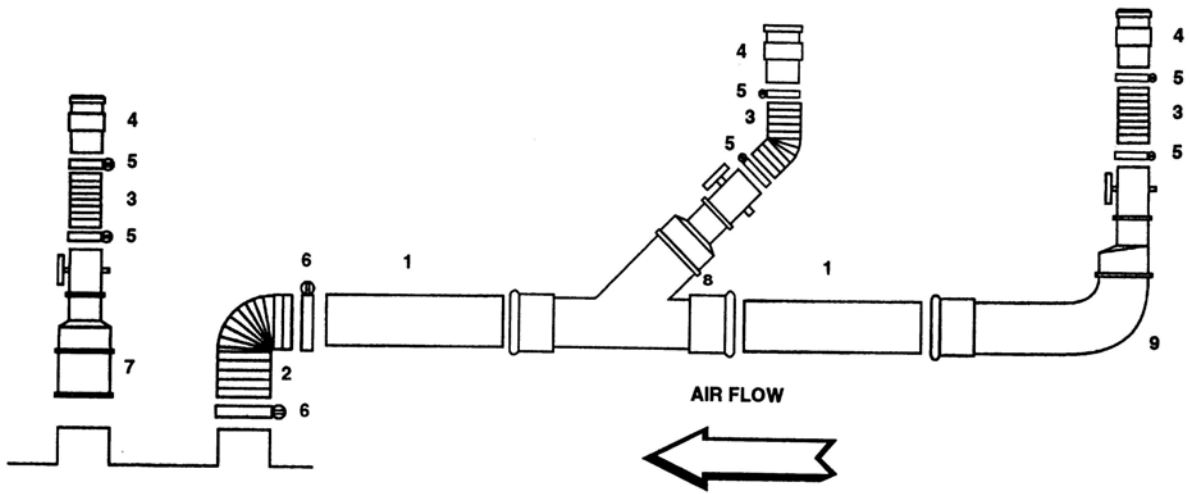

EDSYN, Inc.

15958 Arminta Street Van Nuys CA 91406 Phone: 818.989.2324 Fax: 818.989.2324 www.edsyn.com