

FXI501

Installation Kit for the FX250, FX300 or FX500 Volume Extraction with 4 x 50mm Arms

CONTENTS


Item	Quantity	Description
1	4	2.5m Long 75mm Tube
2	2	1 m Long 75mm Flexi Tube
3	4	1 m Long 50mm Flexi Tube
4	4	Adaptor
5	10	75mm Cobra Clips
6	10	Screws
7	2	75mm Y or T with Reducer and Balancing Valve
8	2	75mm Elbow with Reducer and Balancing Valve
9	1	Silicone Grease

INSTRUCTIONS

The four arms should be attached using the items as shown in the diagram . The 75mm pipe work (item 1) should be fixed to a convenient place on the benches using the cobra clips and screws (items 5 and 6). A smear of silicone grease (item 9) is required on the 'O' ring of all sleeve connections. Make sure all raw tube edges are tapered with a knife to ensure an easy fit into each sleeve.

Once the installation is completed the balancing valves should be adjusted to give an equal flow at each arm.

Should you experience any difficulties with the installation please call our Customer Service Department.

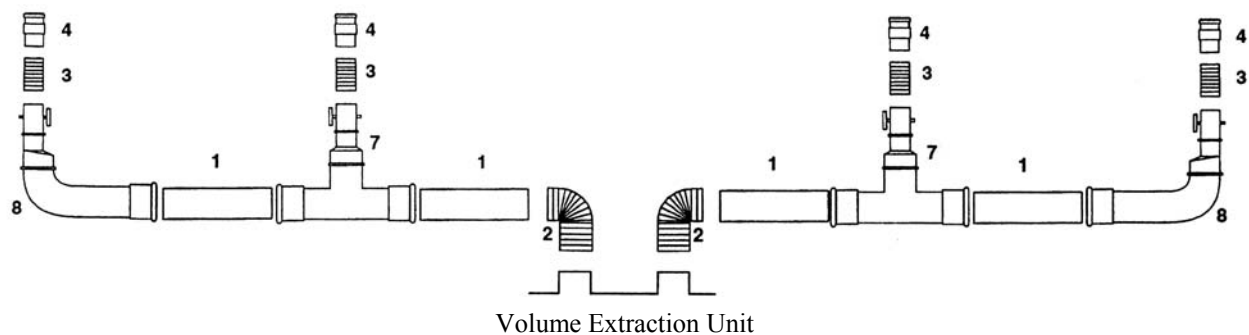

EDSYN, Inc.

15958 Arminta Street Van Nuys CA 91406 Phone: 818.989.2324 Fax: 818.989.2324 www.edsyn.com