

FXI505

Installation Kit for FX500 Volume Extraction Unit with 3 x 75mm Arms or Cowls.

CONTENTS

Item	Quantity	Description
1	2	2.5m Long 75mm Tube
2	4	1 m Long 75mm Flexi Tube
3	1	Silicone Grease
4	1	75mm Balancing Valve
5	1	75mm Y or T with Balancing Valve
6	1	75mm Elbow and Balancing Valve
7	6	75mm Cobra Clips
8	6	Screws


INSTRUCTIONS

Smear a small amount of silicone grease (item 3) onto the 'O' ring in the sleeve of the balancing valve (item 4) and then push fit it onto one of the 75mm connections on the FX500 Unit. The other items shown in the diagram should then be fitted to connect between the balancing valve and the extraction arm.

The other two arms should be attached using the items as shown in the diagram. The 75mm pipe work (item 1) should be fixed to a convenient place on the benches using the cobra clips and screws (items 7 and 8). A smear of silicone grease (item 3) is required on the 'O' ring of all sleeve connections. Make sure all raw tube edges are tapered with a knife to ensure an easy fit into each sleeve.

Once the installation is completed the balancing valves should be adjusted to give an equal flow at each arm.

Should you experience any difficulties with the installation please call our Customer Service Department.

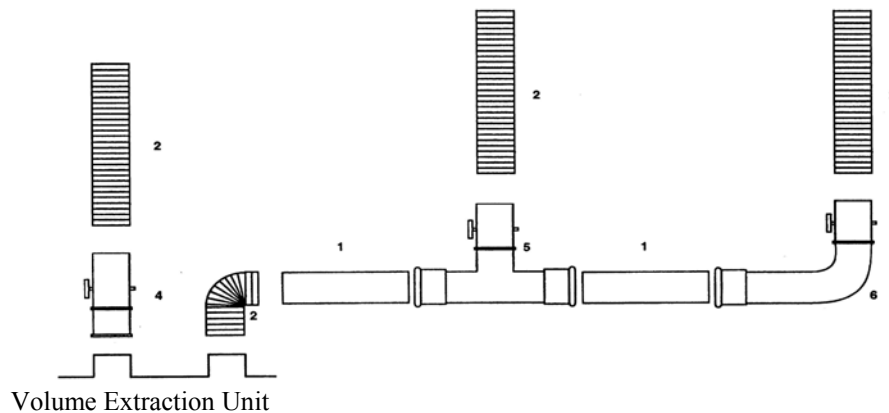

EDSYN, Inc.

15958 Arminta Street Van Nuys CA 91406 Phone: 818.989.2324 Fax: 818.989.2324 www.edsyn.com